5. Disassembly and Reassembly

5-1 Cabinet and PCB

Note : Reassembly in reverse order.

5-1-1 Top Cabinet Removal

1) Remove 3 Screws ❶ on the back Top Cabinet.
2) Lift up the Top Cabinet in direction of arrow.

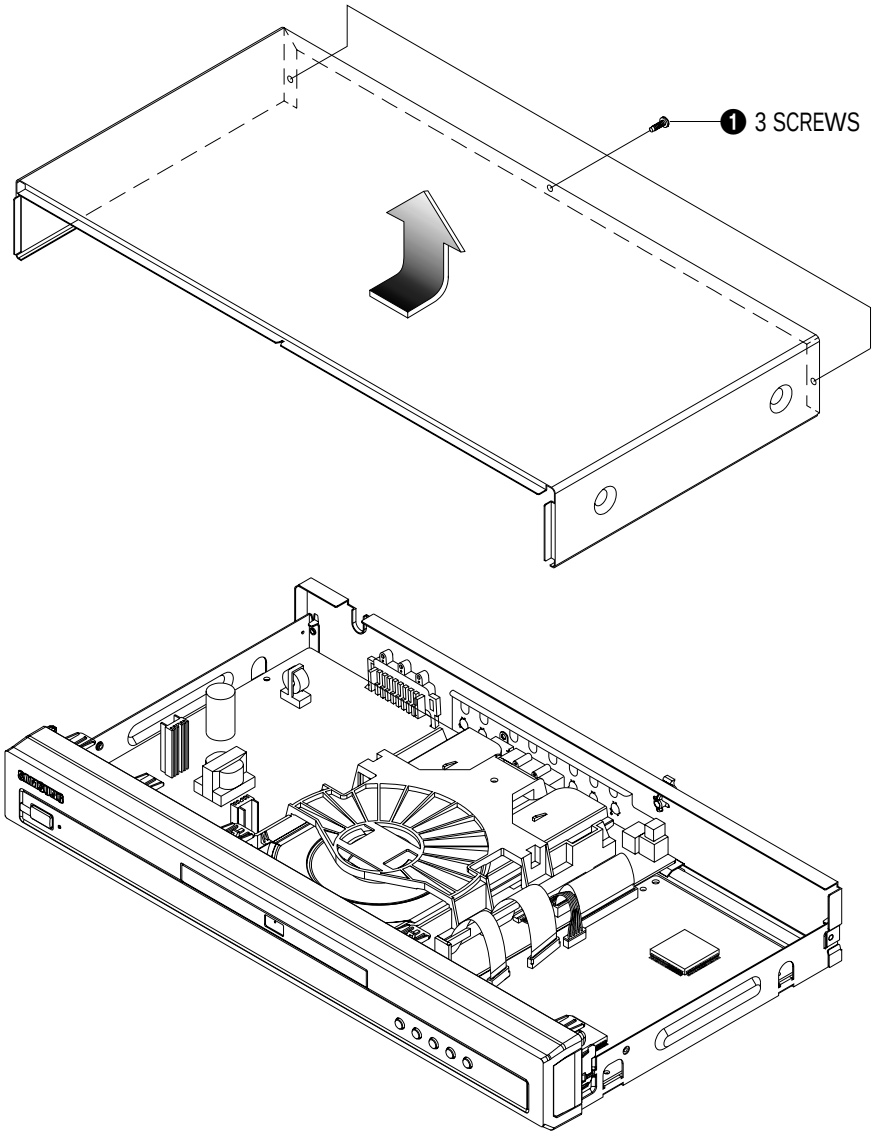

Fig. 5-1 Top Cabinet Removal

5-1-2 Door-Tray Removal

1) Supply power and open Tray ❶.
2) Disassemble the Door-Tray ❷ in direction of arrow “A”.
3) Close Tray ❶ and power off.

Note : If Tray ❶ doesn’t open, insert a Screw driver ❹ into the Emergency hole ❸ (as shown in detailed drawing) and then push it in the direction of arrow “B”. Open Tray manually.

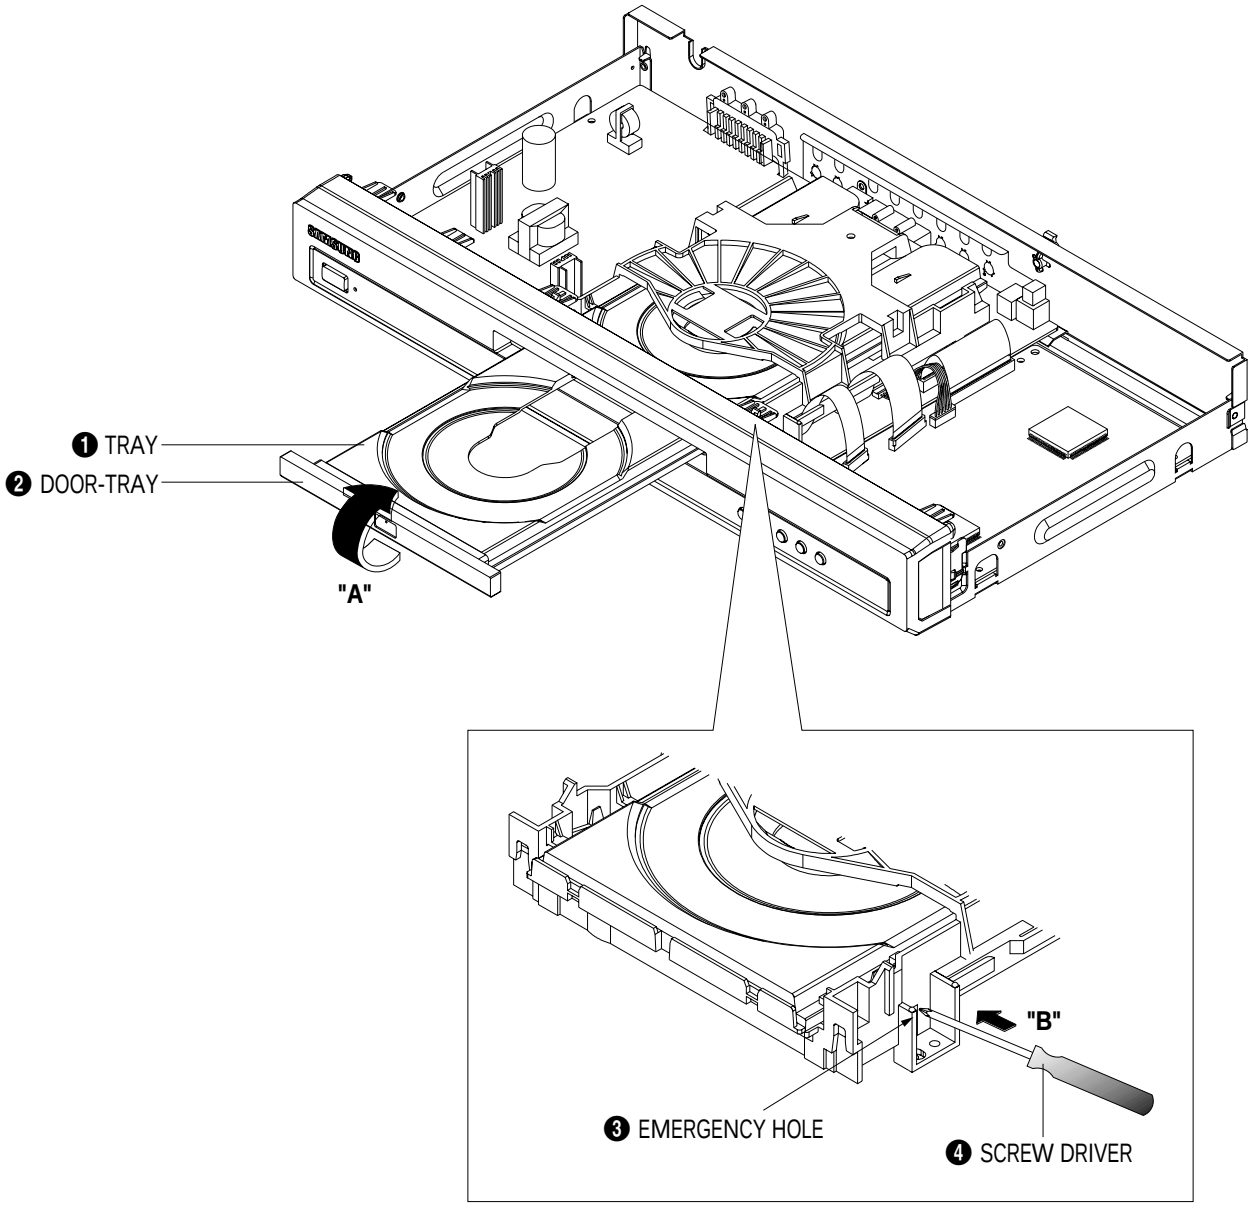

<Side View>

Fig. 5-2 Door-Tray Removal

5-1-3 Ass'y Front-Cabinet Removal

1) Remove Knob-Volume ❶ and Ass'y Front-Cabinet ❷.
2) Remove Knob-Jog ❸ and 5 Screws ❹ and Key PCB ❺.

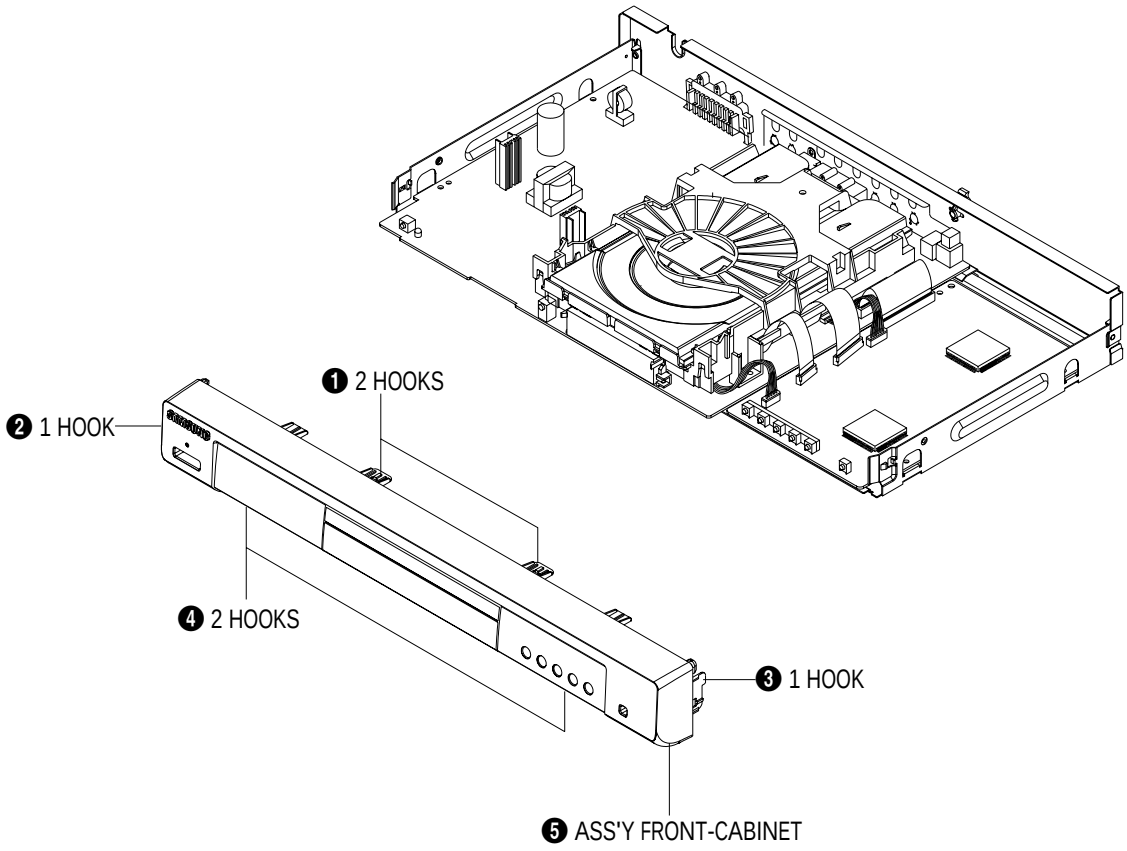

Fig. 5-3 Ass'y Front-Cabinet Removal

5-1-4 Ass'y Deck Removal

1) Disconnect Flat-Cable,Connect-Wire from DCN1, DCN2 on Main PCB.
2) Remove 3 Screws ❶ from the Ass'y Deck and lift it up.

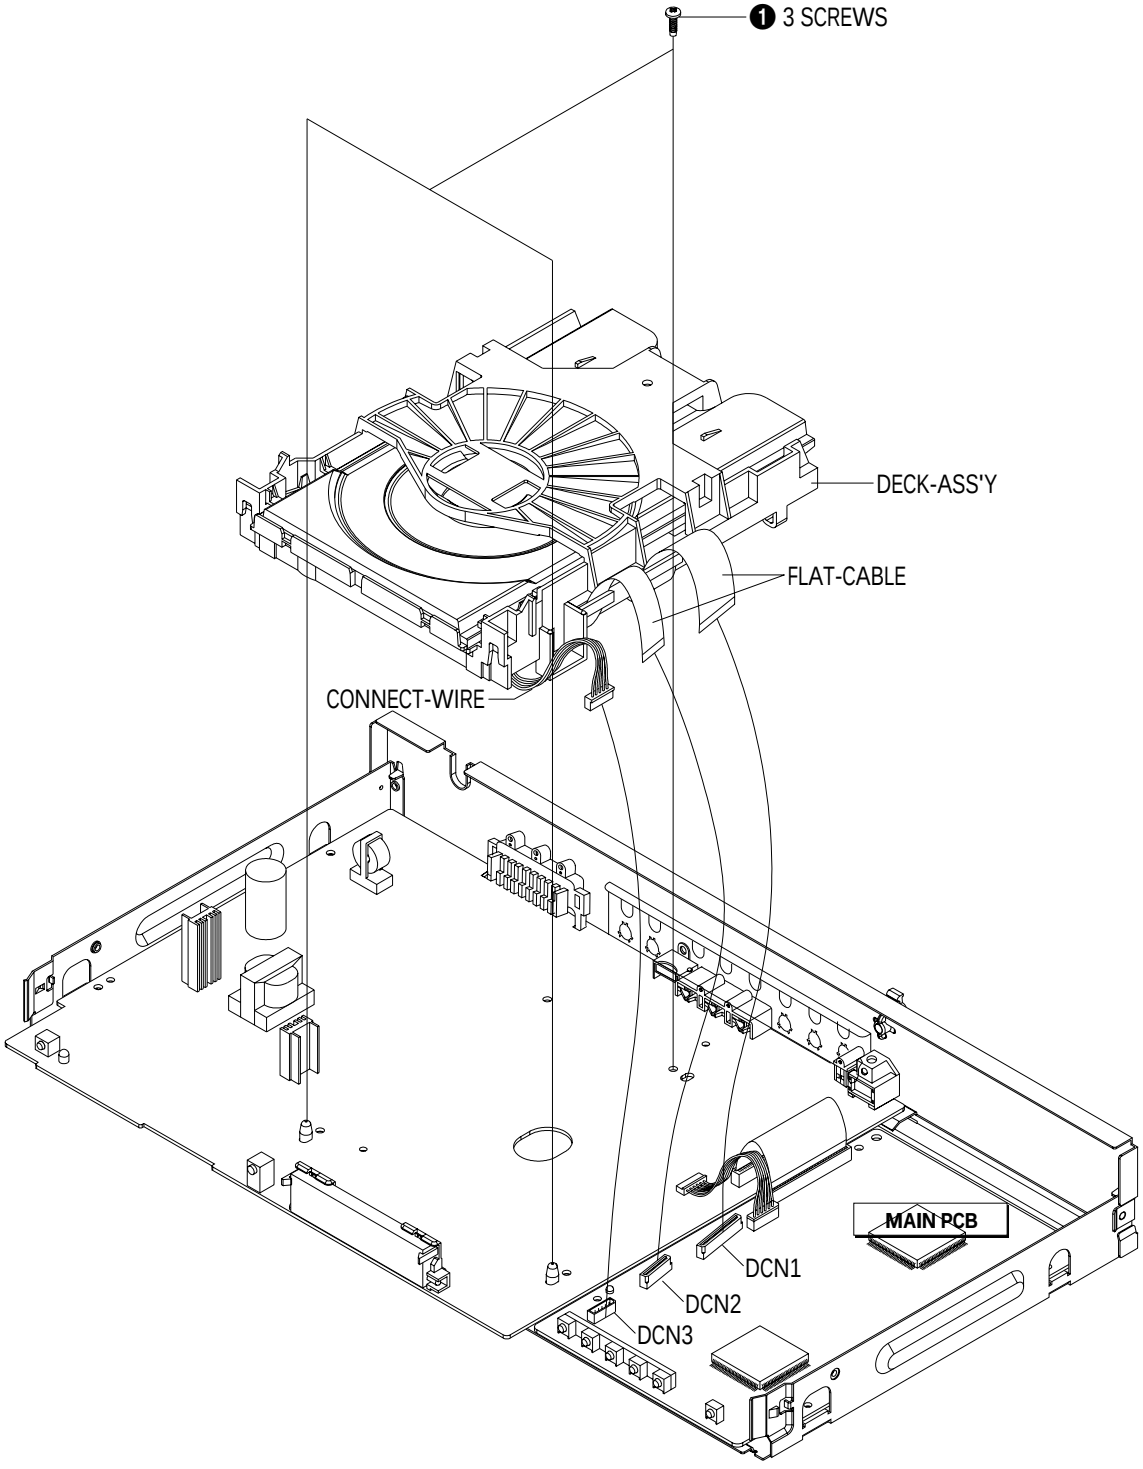

Fig. 5-4 Ass'y Deck Removal

5-1-5 Main PCB, Jack PCB Removal

1) Remove 2 Screws ❶.
2) Remove 2 Screws ❷ and lift up the Jack PCB ❸.
3) Remove 4 Screws ❹ and lift up the Main PCB ❺.

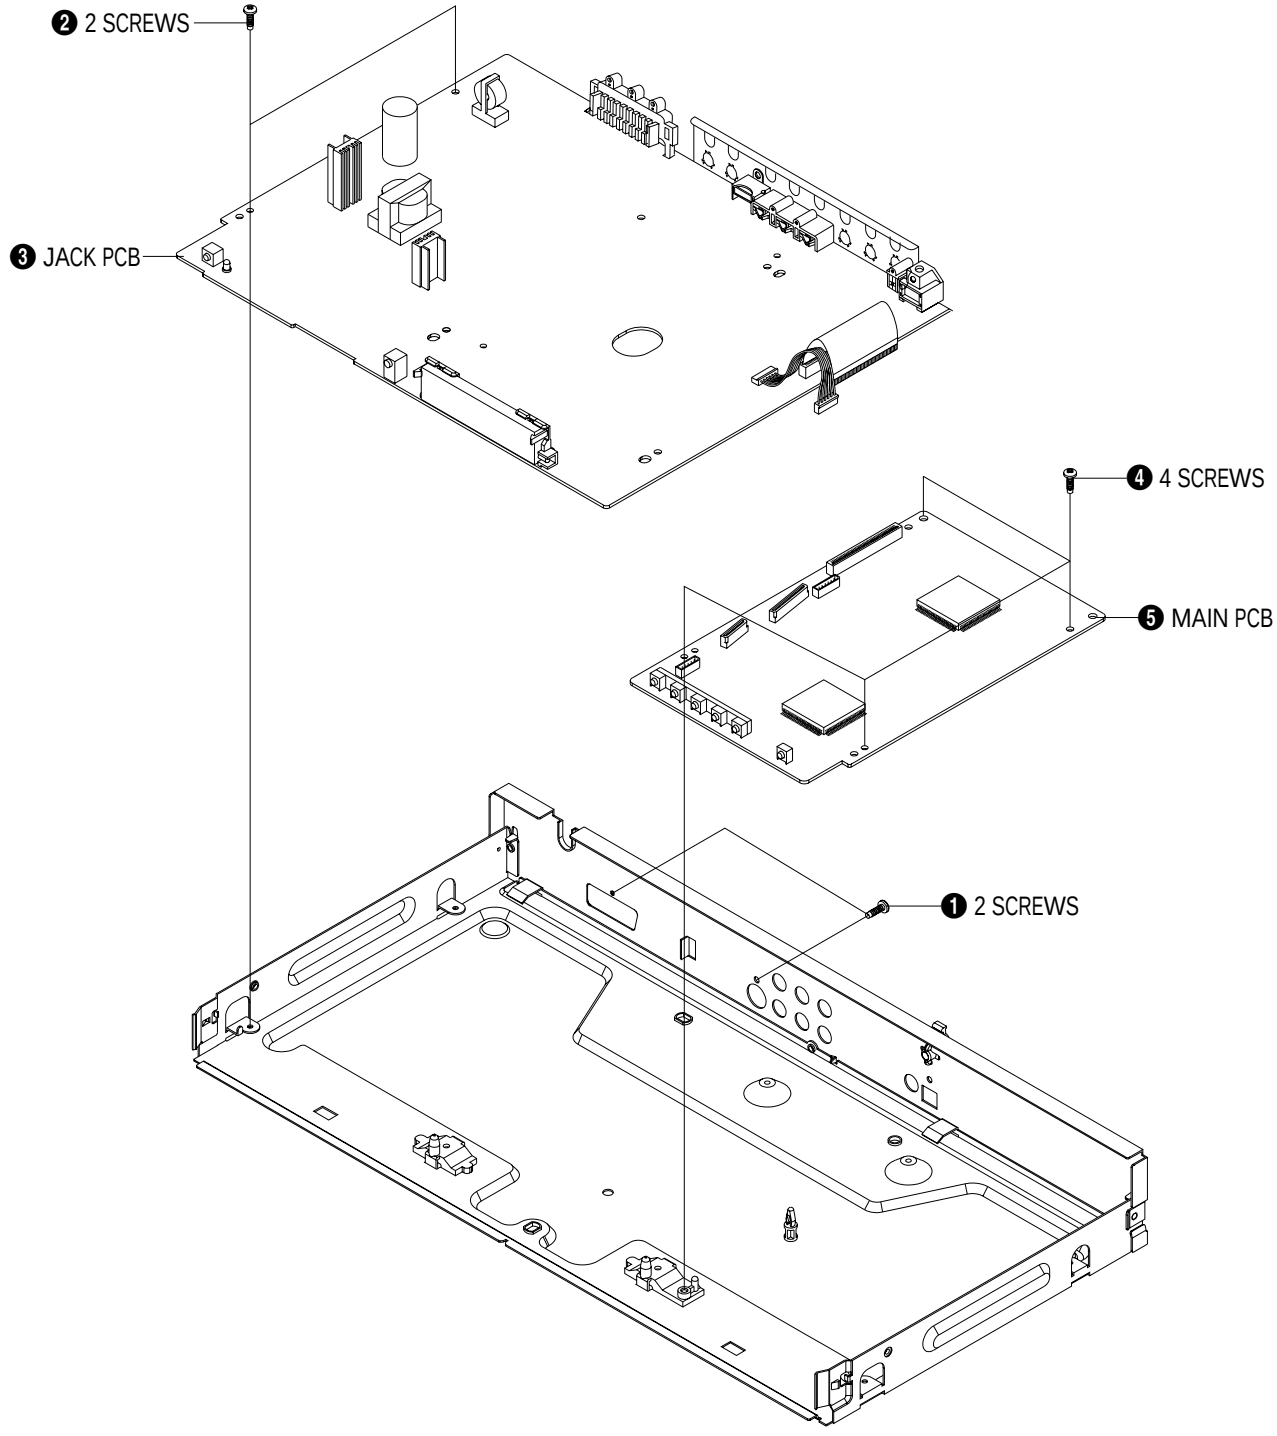

Fig. 5-5 Main PCB, Jack PCB Removal

5-2 PCB Location

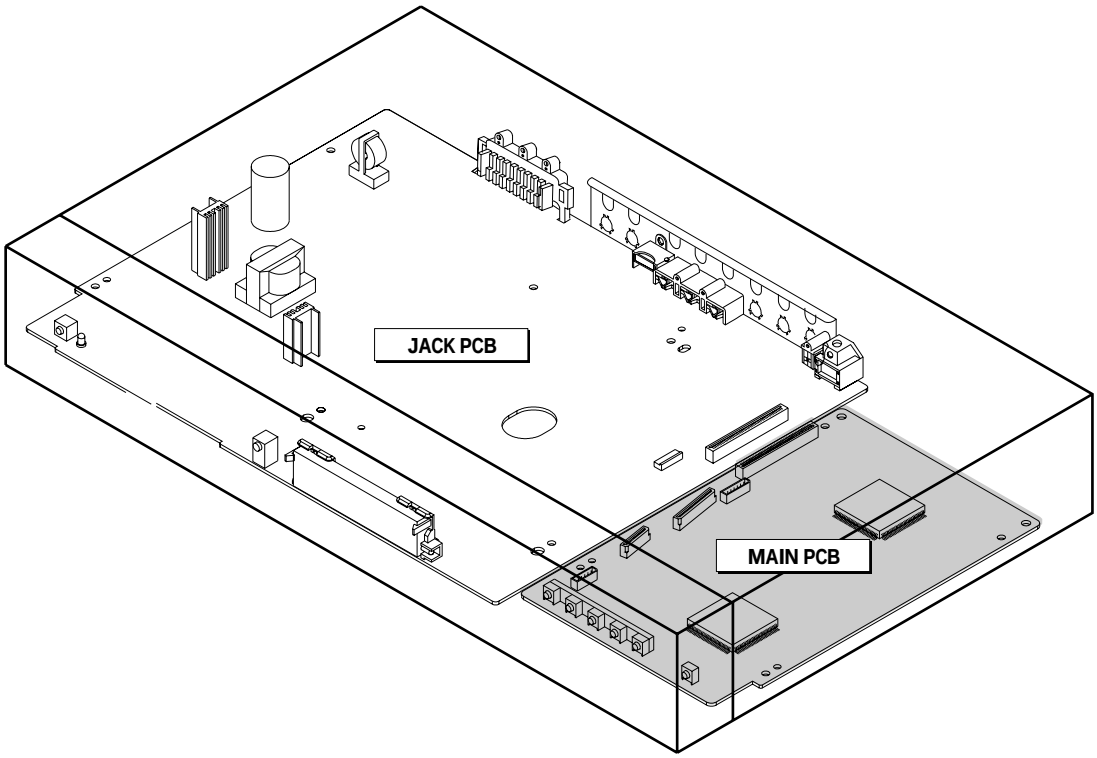

Fig. 5-6 PCB Location

5-3 Deck

5-3-1 Tray Disc Removal

1) Insert a Screw Driver ❶ into Emergency Hole ❷ and push the Slider Housing ❸ in the direction arrow “A”.
2) When the Tray Disc ❹ comes out a little, pull it in the direction arrow “B” by hand.
3) Pull the Tray Disc ❹ to disassemble , while simultaneously pushing 2 Stoppers ❺ (left, right) in the direction arrow “C”, “D”.

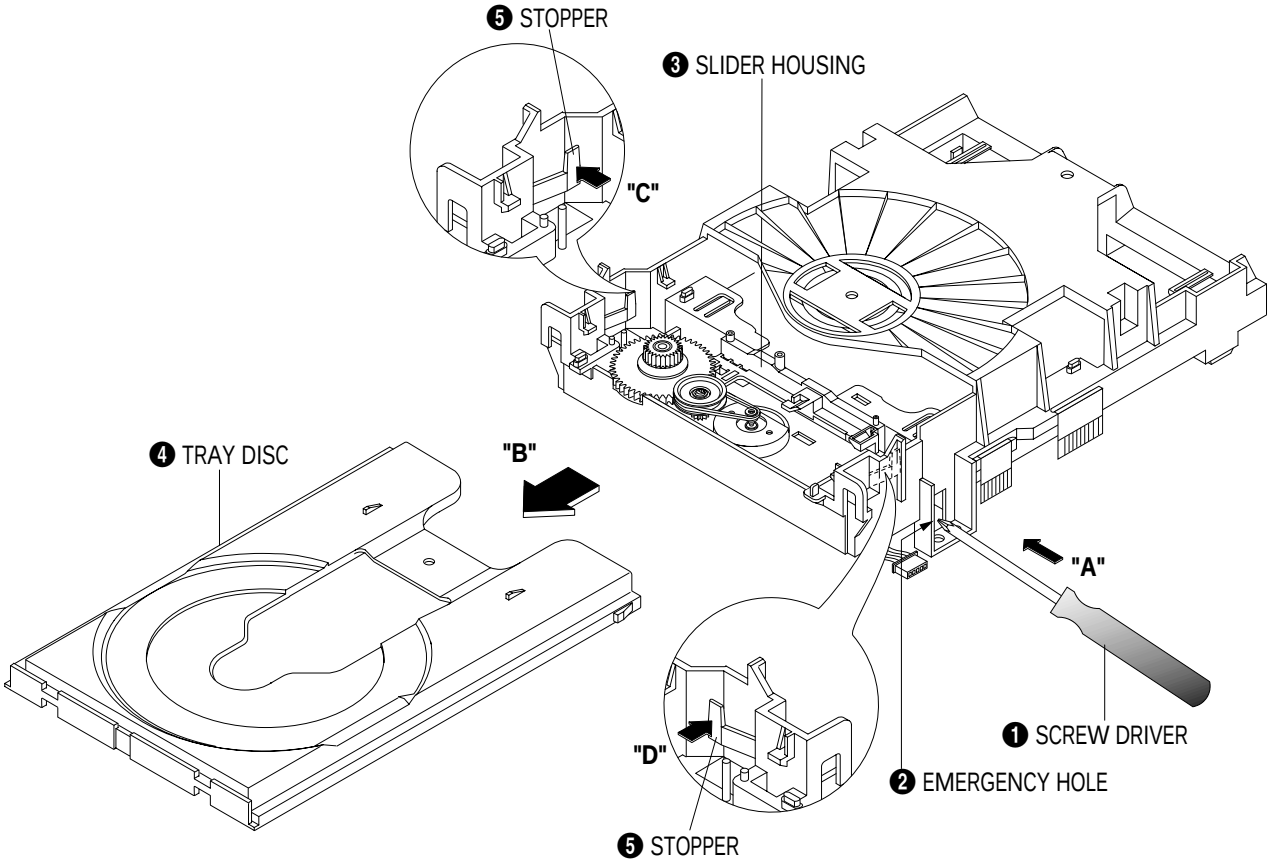

Fig. 5-7 Tray Disc Removal

5-3-2 Assy P/U Deck Removal

1) Disconnect DCN2 ❶, DCN3 ❷.
2) Lift down the Assy P/U Deck ❸ while simultaneously pushing 2 Hooks ❹, ❺ in the direction of arrow "A", "B".

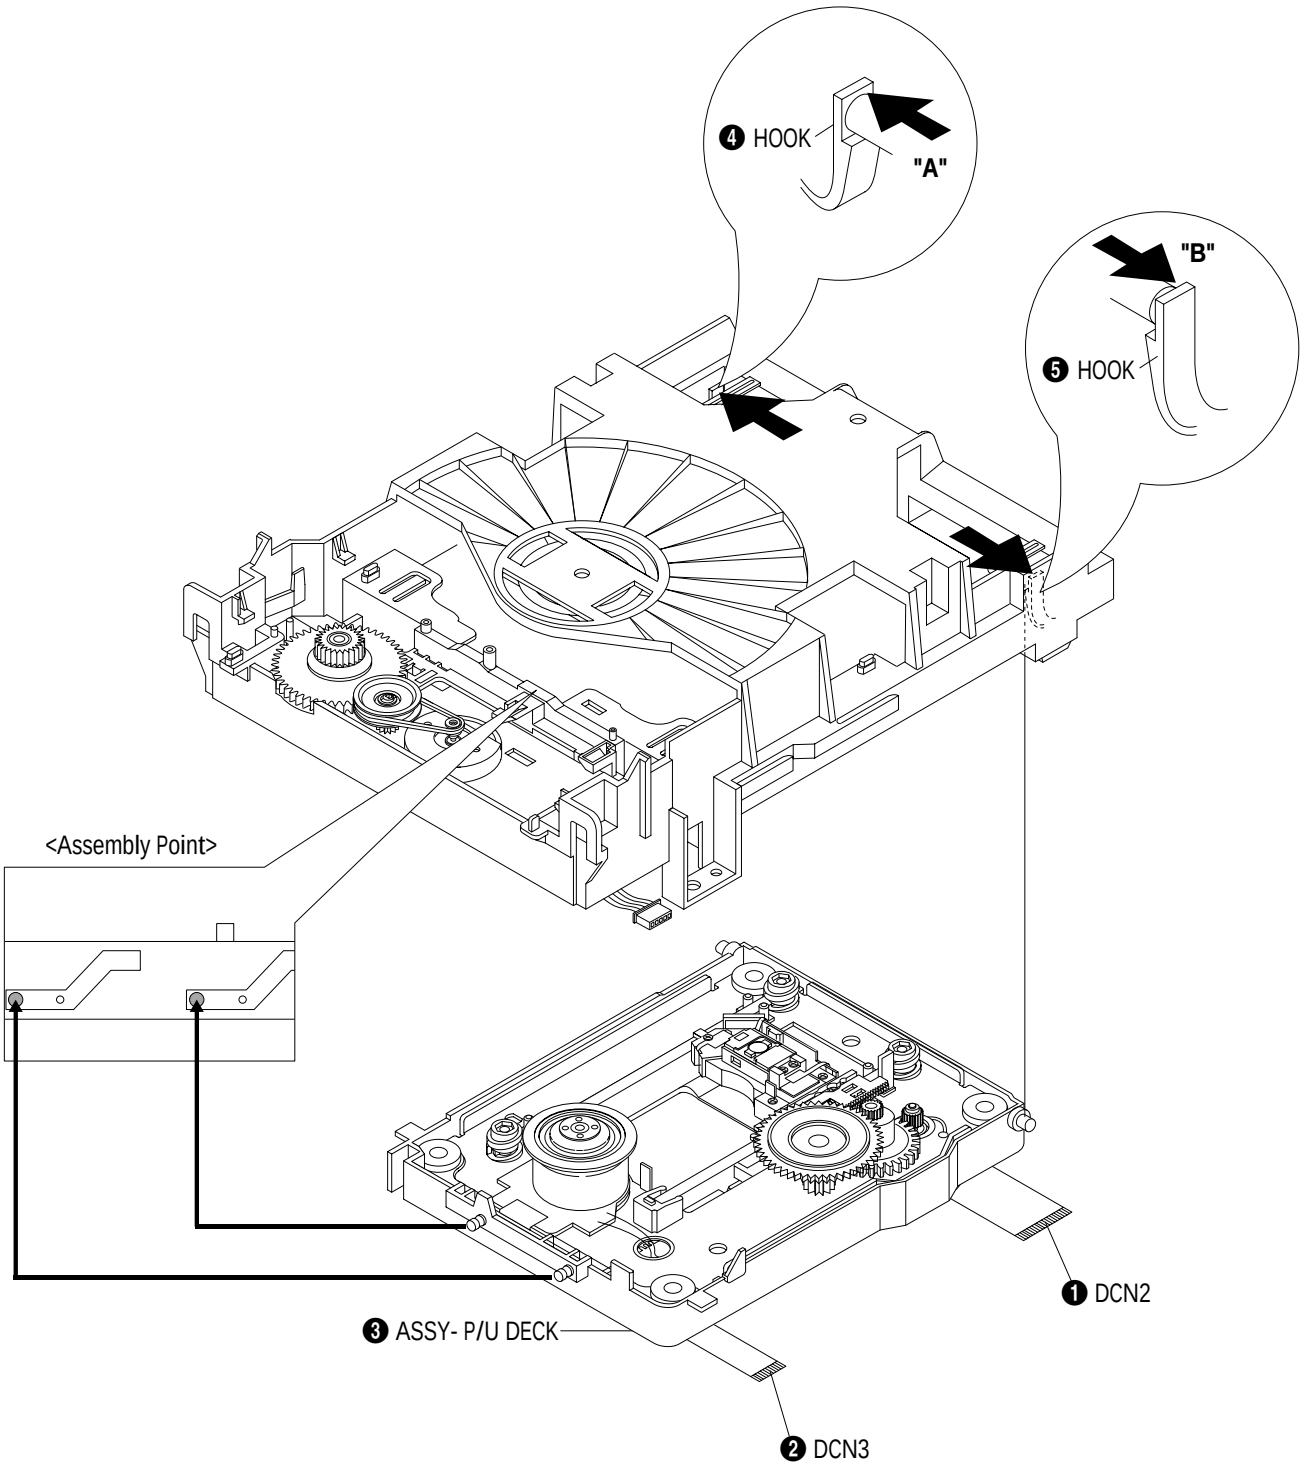

Fig. 5-8 Assy P/U Deck Removal

5-3-3 Housing Ass'y Removal

1) Remove Belt ❶.
2) Push the Hook ❷ in the direction arrow "A" and lift up Pulley Gear ❸.
3) Push the Slider Housing ❺ in the direction arrow "B" and lift up the Gear Tray ❹.
4) Lift up the Slider Housing ❺.
5) Remove 2 Screws ❻ and lift down the Motor Load Assy ❼.
6) Remove Clamper Ass'y ❽.

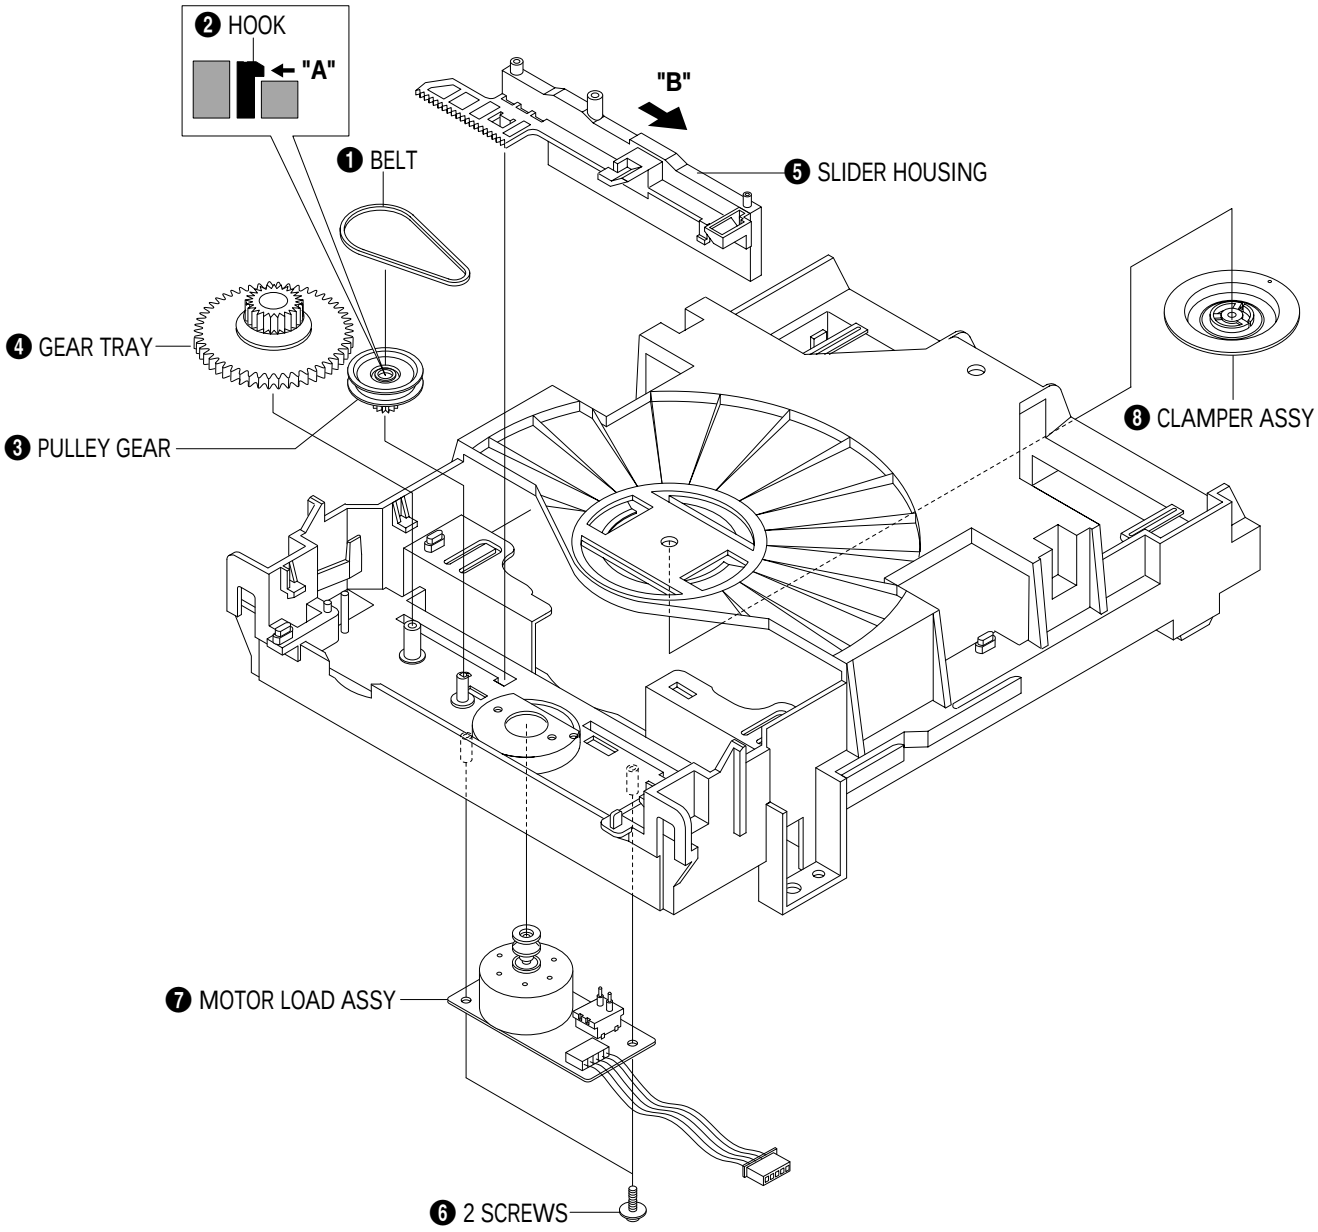

Fig. 5-9 Housing Ass'y Removal

5-3-4 Sub Chassis Removal

1) Remove the Soldering of Motor Feed (+, - wire) ❶.
2) Remove the 4 Screws ❷.
3) Lift up the Ass'y Brkt Deck ❸.

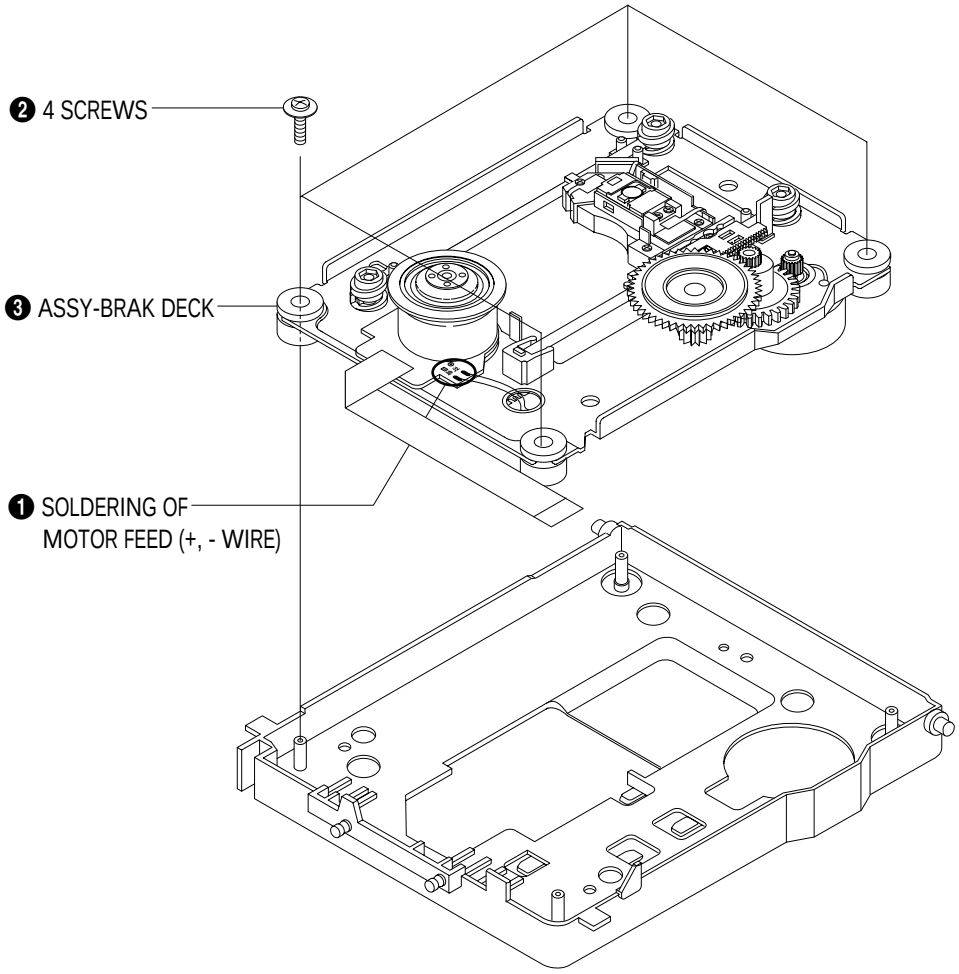

Fig. 5-10 Sub Chassis Removal

5-3-5 Ass'y Brkt Deck Removal

1) Push the Hook ❶ in the direction arrow "A" and lift up Gear Feed B ❷.
2) Remove 3 Screws ❸ and 3 Holder Cam Skew ❹.
3) Remove Shaft Pick-Up ❺ and Pick-Up Assy ❻.
4) Remove Gear Feed A ❼.
5) Remove 2 Screws ❽.
6) Remove Motor Feed Ass'y ❾.
7) Remove 3 Screws ❿.
8) Remove Motor Spindle ⓫.

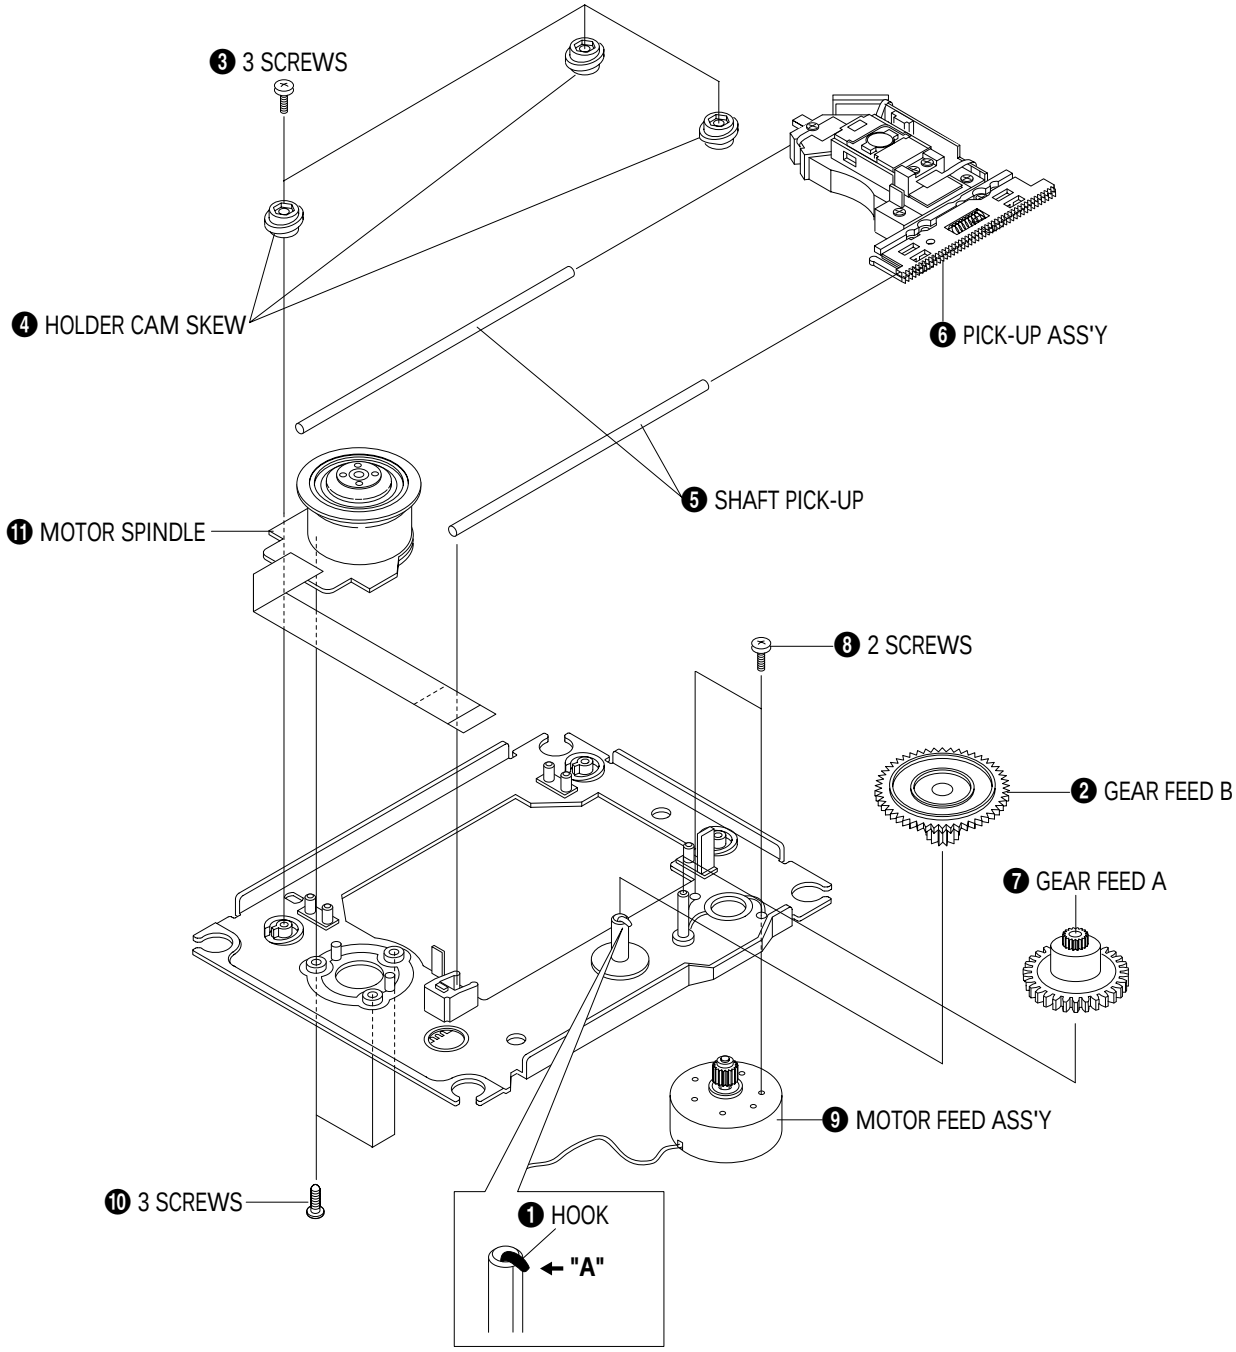

Fig. 5-11 Ass'y Brkt Deck Removal

MEMO